

## Description



- For series connection (RS 232) to enable control programs to be configured and parameterised. This cable is used to connect an analogue model for remote maintenance and remote control.