

Presence detector compact passimo . .

Art. Nr.	.. WH	201 0 080	.. SR	201 0 810
	.. BK	201 0 809	.. SF	201 0 811



(D)	Bedienungsanleitung	2
(F)	Notice d'utilisation	24
(GB)	Installation manual	46
(ES)	Manual de instrucciones	68
(I)	Istruzioni per l'uso	90
(NL)	Gebruikershandleiding	112
(S)	Bruksanvisning	134
(N)	Bruksanvisning	156
(FIN)	Käyttöohje	178
(DK)	Betjeningsvejledning	200

**Presence detector
compact passivo . .****Table of contents**

1. Safety	47
2. Function and performance characteristics.	48
3. Fitting and connection	49
4. Start-up	53
5. Additional wiring examples	57
6. Test mode	60
7. Technical specifications	61
8. Warranty declaration	63
9. Troubleshooting	64

Thank you for purchasing an Theben HTS presence detector and putting your trust in us.

1. Safety

DANGER !

Any work on electrical systems must exclusively be carried out by qualified electricians or instructed persons under the direction and supervision of a qualified electrician in accordance with the relevant electrotechnical rules! Any national safety regulations regarding the manipulation of electrical systems must be observed! **The voltage supply must be disconnected prior to installation!**

CAUTION !

The device is maintenance-free. The warranty terminates if the device is opened or entered with any kind of object.

Designated use

The presence detector is solely intended for the purpose contractually specified between the manufacturer and the user. Any other or extended use has to be regarded as not complying with the designated use. The manufacturer is not liable for any resulting damage.

2. Function and performance characteristics

The compact passivo presence detector has clear vertical detection boundaries below the detector. The compact passivo is used for the comfortable and energy-efficient control of lighting and HVAC in corridors, aisles (aisles with storage racks) or libraries etc.

The switching contact A «Light» switches on the lighting in case of presence **and** insufficient brightness, and off in case of absence **or** sufficient brightness. In addition, the lighting can be switched manually by means of push-buttons.

- Switching contact «Light»: relays 230V
- Manual control by push-button or switch
- Semi or fully automatic operation
- Push-button function: room / corridor
- Suitable for fluorescent lamps, compact energy saving lamps as well as for halogen, incandescent lamps and LEDs
- Pulse function for staircase lighting timer

The switching contact B «Presence» controls heating, ventilation and air-conditioning systems. The contact closes in case of presence, a switch-on delay allows a delayed switching on. The contact can also be used for room surveillance purposes. Using reduced sensitivity, it only responds on very distinct movements.

- Switching contact «Presence», potential-free relay
- Adjustable switch-on delay and switch-off delay
- Surveillance function

3. Fitting and connection

3.1 Presence detection


The ideal mounting height is 2,0 - 3,5m. The sensitivity of the detector as well as the precision of measurement decreases with increasing mounting height. The detection ranges of multiple detectors should overlap in their fringe zone. Ensure the horizontal installation of the detector.

M'height	radial (r)		tangential (t)	
2,0 m	28 m ²	8m ± 1,5m x 3,5m	28 m ²	8m ± 1,5m x 3,5m
2,5 m	36 m ²	9m ± 1,5m x 4,0m	44 m ²	11m ± 1,5m x 4,0m
3,0 m	45 m ²	10m ± 1,5m x 4,5m	68 m ²	15m ± 1,5m x 4,5m
3,5 m	50 m ²	10m ± 1,5m x 5,0m	75 m ²	15m ± 1,5m x 5,0m
4,0 m	50 m ²	10m ± 2m x 5,0m	75 m ²	15m ± 2m x 5,0m
4,5 m	50 m ²	10m ± 2m x 5,0m	75 m ²	15m ± 2m x 5,0m
5,0 m	50 m ²	10m ± 2,5m x 5,0m	75 m ²	15m ± 2,5m x 5,0m
6,0 m	50 m ²	10m ± 2,5m x 5,0m	75 m ²	15m ± 2,5m x 5,0m



See page 51 regarding the detection limit below the presence detector.


Detection range (mounting height 3,0m)

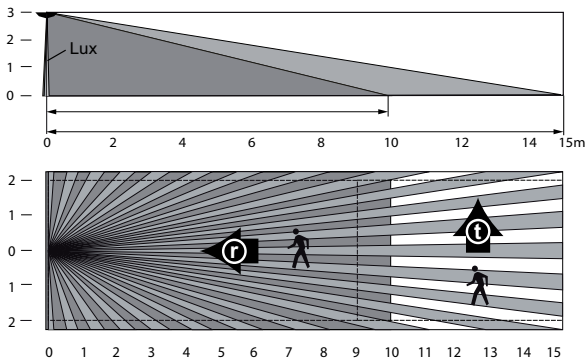

Because of the virtually horizontal detection of compact passimò, the detection range of tangential (**t**) movements of persons is different to the range of radial (**r**) movements towards the detector.

Detection limit below the presence detector

GB

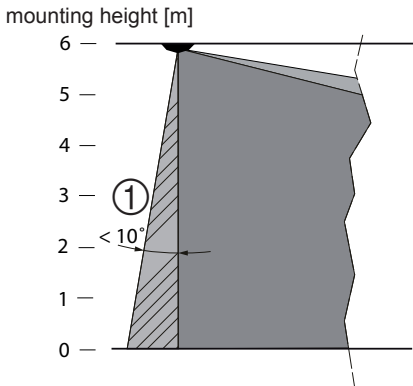


① The tolerance of the detection limit below the presence detector depends on the installation height as well as accuracy of installation.

3.2 Light measurement

The detector measures artificial light and daylight reflected directly beneath the detector (beam width approx. $\pm 30^\circ$).

The mounting location is used as the reference for the lighting levels.

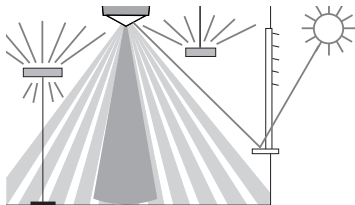


With indirect lighting, the artificial light at the detector's mounting location should not exceed 2000 Lux (Brightness value > 2000 Lux).

3.3 Connection

A concealed housing should be used for flush-mounted fitting of the presence detector compact passivo.

A surface frame is available for surface mounting.

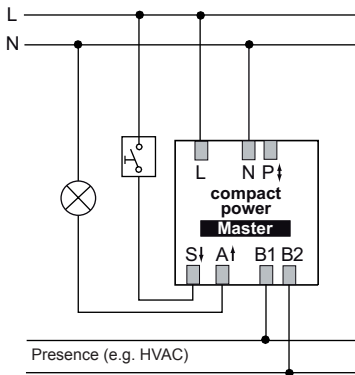

4. Start-up

The detectors are supplied ready for operation with a factory setting of recommended standard values.

The SendoPro management remote control are available as an option for start-up. With the remote control all potentiometer values can be set from a distance.

4.1 Settings for switching contact A «Light»

Potentiometer

① **Brightness threshold “LUX”**

- Transfer zones (no working area)
- Bright transfer zones
- Deactivation of brightness measurement

Scale


approx. 2

approx. 4


“on”

Depending on the installation location, natural light intensity, furniture, reflection characteristics of the room and the furniture it may be necessary to correct the settings by 1-2 steps on the scale.

For ease of setting up, we recommend the management remote control SendoPro.

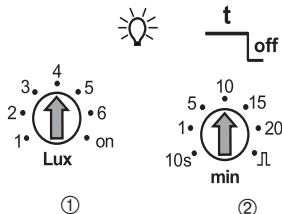

② Switch-off delay time

- Transfer areas approx. 5min.
- In the range between 2 - 15min the switch-off delay varies according to its self-learning behavior. The set values <2min or >15min remain fixed.
-  «Pulse»: staircase lighting timer control (0.5s “on” / 10s “off”)

DIP switch



③ Fully / Semi-automatic mode

- «auto»: Fully automatic mode. The lighting is switched on automatically.
- «man»: Semi-automatic mode. The lighting must be switched on manually.


④ Push-button function: room / corridor



- «room»: Manual switching on/off possible.
- «corridor»: Detector is used as staircase lighting timer. No manual switching-off possible.

⑤ Push-button/Switch control

- Optional push-button or switch operation.
- Multiple push-buttons on one control input possible.
- Use illuminated push-buttons with PEN conductor connection only.



4.2 Settings for switching output B «Presence»


⑥ Switch-off delay time for presence

- The pre-set values remain unchanged (no self-learning effect).


GB

⑦ Switch-on delay time for presence

- In case of presence, the contact does not close before the set switch-on delay has elapsed.
- 0 = Contact closes immediately in case of presence.
- 👁 Room surveillance function; the contact closes only in case of distinct movements (effective protection against false alarms).

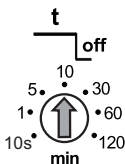

⑥

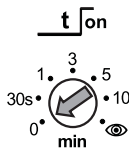

⑦

4.3 Behaviour on switching on

Whenever the sensor module is plugged onto the power module or the unit is energised, the detector goes through three phases which are indicated by an LED.

1. Start-up phase (30sec)

- LED flashes every second, both contacts are closed (light and presence on)
- In case of absence, both contacts open after 30sec.

2. Service phase (10min)

- The «Light» contact reacts instantaneously on brightness in order to check the brightness threshold.
- If the brightness is insufficient the lighting is switched on (LED on), and if the brightness is sufficient the lighting is switched off (LED off).
- During the service phase, switching of the lighting occurs fully automatically (no semi-automatic mode).
- The service phase terminates earlier by actuating the push-button or the remote control.

3. Operation

- The detector is ready for operation (LED off).



5. Additional wiring examples

5.1 Master-Slave parallel circuit operation

GB

Multiple detectors control **one** lighting group



- Only the master switches the lighting. All other detectors serve as slaves.
- Presence detection is done by all detectors together.
- Light measurement occurs on the master only.
- Only set the potentiometer and DIP switches on the master.
- Max. 10 detectors can be connected in parallel.
- Use the same phase for all detectors.
- Mark the power modules as master or slave respectively.

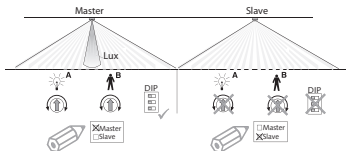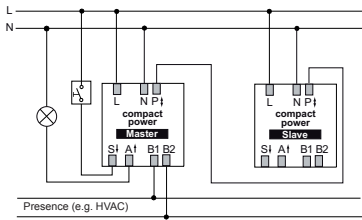

5.2 Master-Master parallel circuit operation


Multiple masters control multiple lighting groups

- One master with individual brightness measurement per lighting group.
- Presence detection is done by all detectors together.
- Potentiometer and DIP switches are set on each master individually.
- Max. 10 detectors can be connected in parallel.
- Use the same phase for all detectors.
- The switching contact «Presence» can be tapped on any master.
- Mark the power modules as master or slave respectively.

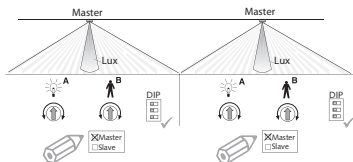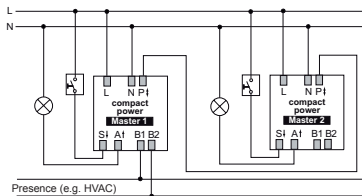

5.3 Parallel circuit operation with external staircase lighting timer


- Directly connect the switching contacts of multiple detectors in parallel.
- Set the switch-off delay on all detectors to “pulse”.
- Mark all power modules as master.
- Staircase lighting timer e.g. Theben ELPA 1

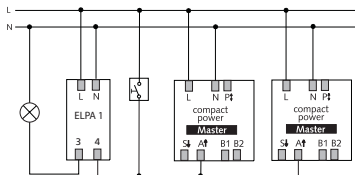

GB

5.4 Detector as staircase lighting timer

- The master directly controls the lighting.
- The push-button starts the master's switch-off delay.
- Set DIP switch to “corridor” to prevent switching off via push-button.
- Further slaves can be connected in parallel using the P-terminal if required
- Only set the potentiometer and DIP switches on the master.
- Mark the power modules as master or slave respectively.

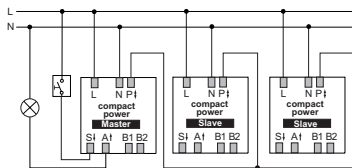

6. Test mode

The test mode serves to check the presence detection and the wiring (Master-Slave parallel circuit operation).



6.1 Setting the test mode with DIP-Switch

- Set DIP switch to «Test» (on all detectors in parallel circuit operation).

1. Start-up phase (30sec)

- Both contacts are closed for 30sec. (LED 20s «on», 10s «off»)



2. Test mode

- In case of movement (LED on), both contacts close.
- In case of absence (LED off), both contacts open after 10sec.
- NOTE: no brightness measurement, detector always in fully automatic mode.
- The detector remains permanently in the test mode.

6.2 Setting the test mode with the remote control

- While setting the test mode with the management remote control Sendo-Pro, the detector jumps the start-up phase and changes directly into the test mode.
- Test mode ceases automatically after 10 minutes. The detector performs a reset (see section 4.3).

7. Technical specifications

Sensor module	compact passimo
Detection range horizontal	180°
Recommended mounting height	2,0 - 3,5m / max. 6 m
Maximum range	15 x 5 m (Mh. 3,5m) tangential 10 x 5 m (Mh. 3,5m - 6m) radial
Mixed light measurement Light measurement deactivated	ca. 10 - 1500Lux „on“
Switch-off delay time for light Short pulse	10sec. - 20min. 0.5sec. „on“ / 10sec. „off“ 
Switch-off delay for „Presence“	10sec. - 120min.
Switch-on delay for „Presence“ Room surveillance	0sec. - 10min. 
Power module	compact power
Mains voltage	230V ± 10%, 50Hz
Relais output A for «Light»	230V ± 10%
In-line fuse	max. 10A
Max. switching capacity	1200W
Max. nr. of electronic ballasts *) (A relay or contactor must be connected in case of more powerful devices)	10x54/58 W, 5x2x 54/58 W 16x35/36 W, 8x2x35/36 W

*) Use of T5-FL: When using T5-FL lamps with a comparable wattage, the same number of electronic ballasts may be connected to the detector's switching contact as for the T8-FL. When using the 80W-FL, the number should be halved in comparison to the 58W-FL.

Relais output B for «Presence»	potential-free
Maximum voltage	220V DC / 250V AC
Maximale switching capacity	50 W (220 V DC), 50 VA (max. 2 A)
Recommended minimum load	10mV / 10mA
Depth, Diameter Mounting place	40mm, Ø 48mm 70 x 70mm
Screw terminals	max. 2x 2.5mm ²
Size of concealed housing	Size 1, (NIS,PMI)
Ambient temperature	0° - 50°C
Degree of protection	IP 20 (installed IP 40)
Article numbers	
compact passimo WH, white	201 0 080
compact passimo BK, black	201 0 809
compact passimo SR, silver	201 0 810
Surface frame for compact, white	907 0 514
Surface frame for compact BK, black	907 0 637
Surface frame for compact SR, silver	907 0 638
Management remote control SendoPro 868-A	907 0 675

CE Declaration of Conformity

It conforms to the EMC Directive 2014/30/EU and Directive 2014/35/EU.



8. Warranty declaration

Theben HTS presence detectors are manufactured and quality-tested with the utmost care using state-of-the-art technologies. Theben HTS therefore guarantees perfect function, provided the detectors are used as intended. However, should a defect occur, Theben HTS offers the following warranty within the scope of its General Terms and Conditions of Business:

Please bear in mind the following points:

- The warranty period is 24 months, commencing from the manufacturing date.
- The warranty becomes null and void if you or third parties undertake alterations to the units.
- If the presence detector is connected to a software-controlled system, the warranty for this connection is only valid provided the stated interface specification is adhered to.

We undertake to repair or replace as quickly as possible all supplied components which have become defective or unusable as a result of demonstrably bad material, faulty design or defective workmanship up to the expiry of the warranty period.

Returns

In the event of a warranty claim please send the unit together with the delivery note and a brief description of the fault to the dealer concerned.





Industrial property rights

The concept including hardware and software of these units is protected by copyright.

9. Troubleshooting

Fault	Cause
Lighting does not switch on or switches off in case of presence and darkness	Lux value setting is too low; Detector is in semi-automatic mode; Lighting was switched off manually; Person is outside the detection range; Detection is disturbed by obstacle(s); Set switch-off delay setting is too short
With persons present, the lighting is on although the brightness is sufficient	Lux value setting is too high; The lighting has been switched on manually with clic recently (wait for 30 min); Detector is in test mode
Lighting does not switch off or switches on spontaneously in case of absence	Wait until the switch-off delay time has elapsed (self-learning effect); Disturbing heat sources within the detection range (heaters, incandescent lamp/ halogen lamp, moving objects (e.g. curtains due to open windows); Load (el. starter devices, relay) has no interference suppression
Lighting keeps switching on and off during the service phase	Too much artificial light is falling on the detector. Increase lux value or reposition the detector.
Push-button does not work	Device is still in start-up phase or an illuminated push-button without neutral conductor connection is used; Push-button is not connected to the master
Lighting cannot be switched off with the push-button	DIP-switch in „corridor“ position
Device does not respond	Short circuit/ multiple phases connected in parallel! Disconnect detector from mains for 5 min. (thermal protection switch).
Error blinking (4x per sec.)	Failure during self test. Device not working!

Dimensions compact passivo . .

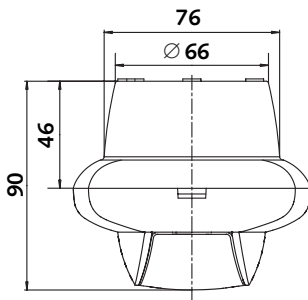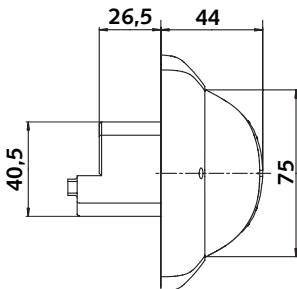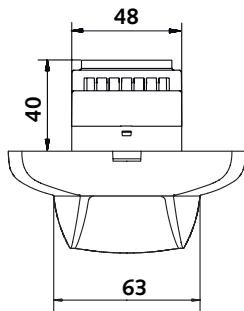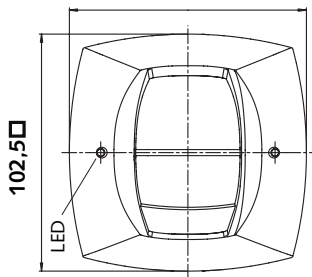

GB

Subject to change without prior notice. Errors and omissions excepted.

Theben AG

Hohenbergstrasse 32, DE-72401 Haigerloch

Tel. +49 (0) 74 74 692 - 0

Fax +49 (0) 74 74 692 - 150

Hotline

Tel. +49 (0) 74 74 692 - 369

Fax +49 (0) 74 74 692 - 207

hotline@theben.de

Switzerland

Theben HTS AG

Im Langhag 7b, CH - 8307 Effretikon

Tel. +41 (0)52 355 17 00

Fax +41 (0)52 355 17 01

www.theben-hts.ch

Please find the contact addresses for additional countries on www.theben.de