


MIX 2 series actuators RMG 4 U / RME 4 U and FIX1 series RM 4 U

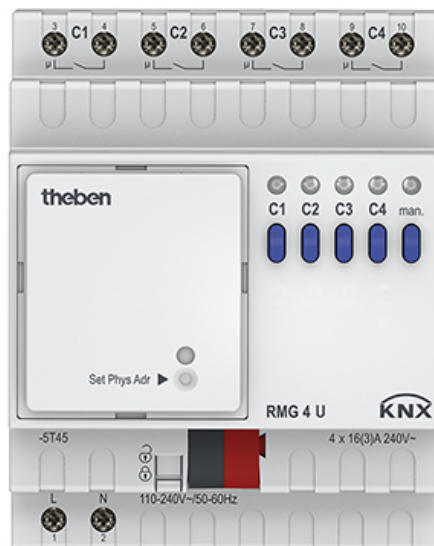

RMG 4 U	4930223
RME 4 U	4930228
RM 4 U	4940223

Contents

1	<i>Functional characteristics</i>	4
2	<i>MIX and MIX2 devices</i>	5
3	<i>MIX2 and FIX devices</i>	5
3.1	Operation	6
4	<i>Technical data</i>	7
5	<i>The application programme "MIX2 V1.8"</i>	8
5.1	Selection in the product database	8
5.2	Communication objects	9
5.2.1	Channel-related objects:	9
5.2.2	Common objects:	12
5.2.3	Description of objects.....	13
5.3	Parameter	20
5.3.1	Parameter pages	20
5.3.2	Parameter description	21
5.3.2.1	The " <i>General</i> " parameter page.....	21
5.3.2.2	The " <i>RMG 4 U basic module</i> " parameter page	23
5.3.2.3	The " <i>RMG 4 U channel Cx: Configuration options</i> " parameter page.....	24
5.3.2.4	The " <i>Contact characteristics</i> " parameter page	26
5.3.2.5	The " <i>On/Off delay</i> " parameter page	27
5.3.2.6	The " <i>Pulse function..</i> " parameter page	27
5.3.2.7	The " <i>Staircase light with forewarning function ..</i> " parameter page.....	28
5.3.2.8	The " <i>Flashing..</i> " parameter page.....	29
5.3.2.9	The " <i>Threshold</i> " parameter page.....	30
5.3.2.10	The " <i>Block function</i> " parameter page	32
5.3.2.11	The " <i>Scenes</i> " parameter page	33
5.3.2.12	The " <i>Feedback</i> " parameter page	36
5.3.2.13	The " <i>Hour counter and service</i> " parameter page.....	37
5.3.2.14	The " <i>Link</i> " parameter page.....	39
6	<i>Typical applications</i>	40
6.1	2x switching with push button interface	40
6.1.1	Devices:	40
6.1.2	Overview	40
6.1.3	Objects and links	40
6.1.4	Important parameter settings	41
6.2	Switching light with service counter and display	42
6.2.1	Devices	42
6.2.2	Overview	42
6.2.3	Objects and links	43
6.2.4	Important parameter settings	44
6.3	Simple warning function with flashing light	45

6.3.1	Devices:	45
6.3.2	Overview	45
6.3.3	Objects and links	45
6.3.4	Important parameter settings	46
7	Appendix	47
7.1	The scenes	47
7.1.1	Principle	47
7.1.2	Call up or save scenes:	48
7.1.3	Teach in scenes without telegrams (MIX2 and FIX devices ONLY)	50
7.2	Conversion of percentages to hexadecimal and decimal values	50

1 Functional characteristics

- MIX2 4-way switch actuator.
- MIX2 basic module.
- Can be upgraded to a maximum of 12 channels.
- Up to 2 MIX or MIX2 extension modules can be connected to a basic module.*
- Device and KNX bus module can be swapped independently of each other.
- Removable KNX bus module enables devices to be changed without reprogramming.*
- Manual set-up and use of switch actuators is also possible without KNX bus module.*
- LED switching status indicator for each channel.
- Manual operation on device (even without bus voltage).
- Adjustable features: e.g. switching, delayed switching, pulse function.
- Links, type of contact (NC contact/NO contact) and participation in central commands such as permanent On, permanent Off, central switching, and save/call up scene.
- Switch functions: e.g. On/Off, pulse, On/Off delay, staircase light with forewarning.
- Logical links: e.g. block, AND, release, OR.
- Activation of the channel function via 1-bit telegram or 8-bit threshold.

* MIX2 devices only.

2 MIX and MIX2 devices

The MIX2 series consists of the basic modules RMG 4 I, RMG 4 U, RMG 8 S, RMG 8 T, DMG 2 T, JMG 4 T, JMG 4 T 24V, HMG 6 T, BMG 6 T + extensions RME 4 I, RME 4 U, RME 8 S, RME 8 T, DME 2 T, JME 4 T, JME 4 T 24V, HMG 6 T, BME 6 T (as of 03/2015).

Any MiX and MIX2 extension modules can be connected to a MIX2 basic module.

Table 1

Device type	Ord. No.	Designation	Can be used with basic module..	
			in the MIX series	in the MIX2 series
MIX2 basic modules	493...	RMG 4 I, RMG 4 U, RMG 8 S, RMG 8 T, DMG 2 T, JMG 4 T, HMG 6 T, JMG 4 T 24V, BMG 6 T	-	-
MIX2 extensions	493...	RME 4 I, RME 4 U, RME 8 S, RME 8 T, DME 2 T, JME 4 T, HME 6 T, JME 4 T 24V, BME 6 T.	no	Yes
MIX basic modules	491...	BMG 6, DMG 2 S, HMG 4, JMG 4 S, RMG 4 S, RMG 4 C-load, SMG 2 S	-	-
MIX extensions	491...	BME 6, DME 2 S, HME 4, JME 4 S, RME 4 S, RME 4 C-load, SME 2 S	yes	Yes*

* Adjusted parameter display and object numbering.

3 MIX2 and FIX devices

This manual describes the MIX2 devices, and can also be used for the device of the FIX1 series RM 4 U.

The RM 4 U (Ord. No. 494223) behaves as a MIX2 basic module.

Devices in the FIX1 Series:

- Cannot be extended
- Cannot be combined

The remaining functions are mostly identical to those in the MIX2 series.

3.1 Operation

Each channel can be switched on and off independently of all parameters using the buttons on the device. A status LED displays the current switching status.

All bus telegrams are ignored with manual operation switched on (manual button) and the channels are exclusively to be operated via the buttons.

Mains voltage is required for the functioning of the buttons and LEDs, bus voltage or bus module are not required.

4 Technical data

KNX operating voltage	Bus voltage, ≤ 4 mA
Operating voltage	110 – 240 V AC
Frequency	50 – 60 Hz
Standby output	0.3 W
Type of installation	DIN-rail
Width	4 TE
Connection type	KNX bus terminal
Max. cable cross-section	Solid: 0.5 mm ² (Ø 0.8) to 4 mm ² strand with crimp terminal: 0.5 mm ² to 2.5 mm ²
Number of channels	4
Contact gap	< 3 mm
Voltage output	240 V AC
Switch output	Floating
Switching of different phases	Possible
Type of contact	16 A, 3 A NO contact
Resistive load	3680 W
Incandescent and halogen lamp load	2000 W
Fluorescent lamp load (KVG) parallel-corrected	1300 W (140 µF)
Fluorescent lamp load (KVG) not corrected	2000 VA
Fluorescent lamp load (EB)	1200 W
Energy-saving lamps	300 W
LED lamps	< 2 W = 55 W > 2 W = 600 W
Suitable for SELV	Yes, if all channels switch SELV
Ambient temperature	-5 °C ... +45 °C
Protection rating	IP 20
Protection class	II in accordance with EN 60 730-1

5 The application programme "MIX2 V1.8"

5.1 Selection in the product database

Manufacturer	Theben AG
Product family	Output
Product type	RMG 4 U
Program name	MIX2 V1.8

The ETS database can be found on our downloads page: www.theben.de/en/downloads_en.

Table 2

Number of communication objects:	254
Number of group addresses:	254
Number of associations:	255

5.2 Communication objects

The objects are divided into channel-related and common objects

5.2.1 Channel-related objects:

Table 3:

No.	Object name	Function	Type DPT	Flags			
				C	R	W	T
0	<i>RMG 4 U channel C1</i>	<i>Switch object</i>	1 bit 1,001	✓	✓	✓	
		<i>Threshold as percent</i>	1 byte 5,001	✓	✓	✓	
		<i>Threshold 0..255</i>	1 byte 5,010	✓	✓	✓	
		<i>Threshold EIS 5 (DPT9.xxx)</i>	2 byte 9.xxx	✓	✓	✓	
		<i>Threshold 0..65535</i>	2 byte 7,001	✓	✓	✓	
1	<i>RMG 4 U channel C1</i>	<i>Logic input in AND gate</i>	1 bit 1,001	✓	✓	✓	
		<i>Logic input in OR gate</i>	1 bit 1,001	✓	✓	✓	
		<i>Logic input in XOR gate</i>	1 bit 1,001	✓	✓	✓	
2	<i>RMG 4 U channel C1</i>	<i>Block</i>	1 bit 1,003	✓	✓	✓	
3	<i>RMG 4 U channel C1</i>	<i>Call up/save scenes</i>	1 byte 18,001	✓	✓	✓	✓
4	<i>RMG 4 U channel C1</i>	<i>Block scenes = 1</i>	1 bit 1,003	✓	✓	✓	
		<i>Enable scenes = 1</i>					
5	<i>RMG 4 U channel C1</i>	<i>Feedback On/Off</i>	1 bit 1,001	✓	✓		✓
6	<i>RMG 4 U channel C1</i>	<i>Time to next service</i>	2 byte 7,001	✓	✓		✓
		<i>Operating hours feedback</i>	2 byte 7,001	✓	✓	✓	✓
7	<i>RMG 4 U channel C1</i>	<i>Service required</i>	1 bit 1,001	✓	✓		✓
				C	R	W	T

Continuation:

No.	Object name	Function	Type DPT	Flags			
				C	R	W	T
8	<i>RMG 4 U channel C1</i>	<i>Switching with priority</i>	2 bit 2,001	✓	✓	✓	
		<i>Reset service</i>	1 bit 1,001	✓	✓	✓	
		<i>Reset operating hours</i>	1 bit 1,001	✓	✓	✓	
9	<i>Not used</i>						
10.. 198	<i>Channels C2 .. C4 and extension modules: See next table.</i>						

Table 4: Overview of channel-related objects

BASIC MODULE: RMG 4 U			
C1	C2	C3	C4
0	10	20	30
1	11	21	31
2	12	22	32
3	13	23	33
4	14	24	34
5	15	25	35
6	16	26	36
7	17	27	37
8	18	28	38
1st EXTENSION: RME 4 U			
C1	C2	C3	C4
80	90	100	110
81	91	101	111
82	92	102	112
83	93	103	113
84	94	104	114
85	95	105	115
86	96	106	116
87	97	107	117
88	98	108	118
2nd EXTENSION: RME 4 U			
C1	C2	C3	C4
160	170	180	190
161	171	181	191
162	172	182	192
163	173	183	193
164	174	184	194
165	175	185	195
166	176	186	196
167	177	187	197
168	178	188	198

5.2.2 Common objects:

These objects are partly used by the basic module and the two extension modules.

Table 5:

No.	Object name	Function	Type DPT	Flags			
				C	R	W	T
78	<i>RMG 4 U</i>	<i>Manual</i>	1 bit 1,001	✓	✓	✓	✓
158	<i>EM1 RME 4 U</i>						
238	<i>EM2 RME 4 U</i>						
240	<i>Central continuous ON</i>	<i>RMG/E4x/8x,DMG/E2x, SME2S</i>	1 bit 1,001	✓	✓	✓	✓
241	<i>Central continuous OFF</i>	<i>RMG/E4x/8x,DMG/E2x, SME2S</i>	1 bit 1,001	✓	✓	✓	✓
242	<i>Central switching</i>	<i>RMG/E4x/8x,DMG/E2x, SME2S</i>	1 bit 1,001	✓	✓	✓	✓
243	<i>Call up/save central scenes</i>	<i>RMG4x/8x,DMG/E2x, JMG/E4x,SME2S</i>	1 byte 18,001	✓	✓	✓	✓
244	<i>Central safety 1</i>	<i>For JME 4 S</i>	1 bit 1,001	✓	✓	✓	
245	<i>Central safety 2</i>	<i>For JME 4 S</i>	1 bit 1,001	✓	✓	✓	
246	<i>Central safety 3</i>	<i>For JME 4 S</i>	1 bit 1,001	✓	✓	✓	
247	<i>Central up/down</i>	<i>For JME 4 S</i>	1 bit 1,008	✓	✓	✓	
248	<i>Central safety rain</i>	<i>For JMG 4 T</i>	1 bit 1,002	✓	✓	✓	
249	<i>Central safety frost</i>	<i>For JMG 4 T</i>	1 bit 1,002	✓	✓	✓	
250	<i>Version of bus coupling unit</i>	<i>transmit</i>	14 byte 16,001	✓	✓		✓
251	<i>Version of basic module</i>	<i>transmit</i>	14 byte 16,001	✓	✓		✓
252	<i>Version of 1st extension module</i>	<i>transmit</i>	14 byte 16,001	✓	✓		✓
253	<i>Version of 2nd extension module</i>	<i>transmit</i>	14 byte 16,001	✓	✓		✓
				C	R	W	T

5.2.3 Description of objects

- **Object 0** "Switch object, threshold as percent, threshold 0..255, threshold EIS 5 (DPT 9.xxx), threshold 0..65535 "

This object activates the set channel function (see parameter: *Channel function*).

The set channel function can either be activated via 1-bit telegram or by exceeding a threshold (8- or 16-bit telegram).

Table 6:

Parameter		Activation of channel function via
<i>Activation of function via</i>	<i>Type of threshold object</i>	
Switch object		1-bit telegram
<i>Exceeding the threshold</i>	<i>Object type: Percent (DPT 5.001)</i>	Exceeding percentage value
	<i>Object type: Counter value 0..255 (DPT 5.010)</i>	Any value in given numerical range
	<i>Object type: Counter value 0..65535 (DPT 7.001)</i>	
	<i>Object type: EIS5 e.g. CO2, brightness (DPT 9.xxx)</i>	2 byte floating-point number

- **Object 1** "Logic input in AND gate, in OR gate, in XOR gate"

Only available if *Link* is activated (*Configuration options* parameter page).
Forms a logical link together with object 0 to activate the channel function.

- **Object 2** "Block"

Locks the channel function.
Responses to setting and cancelling the block can be configured if the block function has been activated (*Configuration options* parameter page).

- **Object 3 "Call up/save scene"**

Only available if the scene function has been activated (*Configuration options* parameter page).

This object can be used to save and subsequently call up scenes.

Saving stores the channel status.

It does not matter how this status is produced (whether via switch commands, central objects or the buttons on the device).

The saved status is restored when it is called up.

All scene numbers from 1 to 64 are supported.

Each channel can participate in up to 8 scenes.

See appendix: Scenes

- **Object 4 "Block scenes = 1, Enable scenes = 1"**

Locks the scene function with a 1 or a 0 depending on the configuration.

As long as it is blocked, scenes cannot be saved or called up.

- **Object 5 "On/Off feedback"**

Reports the current channel status.

The status can also be fed back inverted depending on configuration.

- **Object 6 "Time to next service, operating hours feedback "**

Only available if the hour counter function

has been activated (*Configuration options* parameter page).

Reports, depending on selected *Type of hour counter* (*Hour counter and service* parameter page), either the remaining period to the next service or the current status of the hour counter.

- **Object 7 "Service required"**

Only available if the hour counter function has been activated (*Configuration options* parameter page) and *Type of hour counter* = *Counter for time to next service*.

Reports if the next service is due.

0 = not due

1 = service is due.

- **Object 8** "*Switching with priority, reset service, reset operating hours*"

The function of the object depends on whether or not the hour counter function has been activated (*Configuration options* parameter page).

<i>Activate hour counter</i>	Function	Use										
yes	<i>Reset service*</i>	Reset service interval counter.										
	<i>Reset operating hours*</i>	Reset hour counter										
no	<i>Switching with priority</i>	Priority control: <table border="1" data-bbox="1011 584 1396 837"> <thead> <tr> <th>Status of object 8</th> <th>Channel status</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>as set by object 0</td> </tr> <tr> <td>1</td> <td>as set by object 0</td> </tr> <tr> <td>2</td> <td>OFF</td> </tr> <tr> <td>3</td> <td>ON</td> </tr> </tbody> </table>	Status of object 8	Channel status	0	as set by object 0	1	as set by object 0	2	OFF	3	ON
Status of object 8	Channel status											
0	as set by object 0											
1	as set by object 0											
2	OFF											
3	ON											

* Depending on configuration.

- **Objects 78, 158, 238** "*Manual*"

Only available for devices in the MIX2 series (order number 493...)

Puts the relevant module in manual mode or sends the status of the manual operation.

Telegram	Meaning	Explanation
0	Auto	All channels can be operated via the bus as well as via the buttons.
1	Manual	The channels can only be operated via the buttons on the device. Bus telegrams will not work.

The duration of the manual mode, i.e. the *Function of the manual button* can be configured on the *General* parameter page.

- **Object 240** "*Central permanent ON*"

Central switch-on function.

Enables simultaneous switch on of all channels (basic and extension modules) with a single telegram.

0 = No function

1 = Permanent ON

Participation in this object can be set individually for each channel (*Configuration options* parameter page).

IMPORTANT:

This object takes top priority.

As long as it is set, the other switch commands will not work on the participating channels.

Works on the following devices:

RMG 4 U / RME 4 U, RMG 4 I / RME 4 I, RMG 8 S / RME 8 S, RMG 8 T / RME 8 T,
RME 4 S / C-load, DMG 2 T, DME 2 S/T, SME 2 S.

- **Object 241** "*Central permanent OFF*"

Central switch-off function.

Enables simultaneous switch off of all channels (basic and extension modules) with a single telegram.

0 = No function

1 = Permanent OFF

Participation in this object can be set individually for each channel (*Configuration options* parameter page).

IMPORTANT: This object has the second highest priority after *Central permanent ON*. As long as it is set, the other switch commands will not work on the participating channels.

Works on the following devices:

RMG 4 U / RME 4 U, RMG 4 I / RME 4 I, RMG 8 S / RME 8 S, RMG 8 T / RME 8 T,
RME 4 S / C-load, DMG 2 T, DME 2 S/T, SME 2 S.

- **Object 242 "Central switching"**

Central switch function.

Enables simultaneous switch on or off of all channels (basic and extension modules) with a single telegram.

0 = OFF

1 = ON

Participation in this object can be set individually for each channel (*Configuration options* parameter page).

With this object, every participating channel responds exactly as if its 1st object (i.e. obj. 0, 10, 20, etc.) were receiving a switch command.

Works on the following devices:

RMG 4 U / RME 4 U, RMG 4 I / RME 4 I, RMG 8 S / RME 8 S, RMG 8 T / RME 8 T, RME 4 S / C-load, DMG 2 T, DME 2 S/T, SME 2 S.

- **Object 243 "Call up/save central scenes"**

Central object for using scenes.

This object can be used to save and subsequently call up "scenes".

Works on the following devices:

RMG 4 I / RME 4 I, RMG 4 U / RME 4 U, RMG 8 S / RME 8 S, RMG 8 T / RME 8 T, DMG 2 T / DME 2 T, JMG 4 T / JME 4 T, RME 4 S / C-load, DME 2 S, SME 2 S, JME 4 S

See appendix: Scenes

- **Objects 244 - 249**

Not used.

- **Object 250** "*Version of bus coupling unit*"

For diagnostic purposes only.

Sends the bus coupling unit software version after reset or download.
Can also be read out via the ETS.

Format: **Axx Hyy Vzzz**

Code	Meaning
xx	00 .. FF = Version of application without dividing point (17 = V1.7, 18 = V1.8 etc).
yy	Hardware version 00..99
zzz	Firmware version 000..999

EXAMPLE: A18 H25 V025

- ETS application version 1.8
- Hardware version \$25
- Firmware version \$25

- **Object 251** "*Version of basic module*"

For diagnostic purposes only.

Only for basic modules in the MIX2 series (order number 493...).

Sends the software version (firmware) of the basic module after reset or download.
Can also be read out via the ETS.

The version is issued as an ASCII character string.

Format: **Mxx Hyy Vzzz**

Code	Meaning
xx	01 .. FF = Module code (hexadecimal).
yy	Hardware version 00..99
zzz	Firmware version 000..999

EXAMPLE: M18 H25 V025

- Module \$18 = RMG 4 U
- Hardware version V25
- Firmware version V25

Possible module codes (as of 03/2015)

Module	Code
Module or mains voltage are unavailable.	\$00
RMG 8 S	\$11
RMG 4 I	\$12
DMG 2 T	\$13
JMG 4 T/JMG 4 T 24V	\$14
HMG 6 T	\$15
RMG 8 T	\$17
RMG 4 U	\$18
BMG 6 T	\$92

- **Object 252** "*Version of 1st extension module*"

Telegram format: See above, object 251

Possible module codes (as of 03/2015)

Module	Code
Module or mains voltage are unavailable.	\$00
RME 8 S	\$11
RME 4 I	\$12
DME 2 T	\$13
JME 4 T/JME 4 T 24V	\$14
HME 6 T	\$15
RME 8 T	\$17
RME 4 U	\$18
BME 6 T	\$92

- **Object 253** "*Version of 2nd extension module*"

See above, object 252

5.3 Parameter

5.3.1 Parameter pages

Table 7

Function	Description
General	Selection of modules and central parameters.
BASIC MODULE: RMG 4 U	General parameters for the basic module: Collective feedback and relay switch delay.
RMG 4 U channel Cx configuration options	Characteristics of channel and activation of additional functions (scenes, links, etc.).
Contact characteristics	Type of contact and status after download, bus failure etc.
Threshold	Settings for triggering channel function through exceeding threshold.
Block function	Type of block telegram and response to blocking.
Scenarios	Selection of scene numbers relevant to the channel.
Feedback	Status of feedback object etc.
Hour counter and service	Type of hour counter and, if required, service interval etc.
Link	Selection of logical link.

5.3.2 Parameter description

Settings that lead to the display of other pages or functions are identified by .. .

Example: *Pulse function..*

5.3.2.1 The "General" parameter page

Designation	Values	Description
<i>Type of basic module</i>	Select device.. RMG 8 S.. RMG 8 T.. RMG 4 I.. RMG 4 U.. DMG 2 T.. JMG 4 T/JMG 4 T 24V.. HMG 6 T..	Selection of available basic module (MIX2 series only)
<i>Type of 1st extension module</i>	not available/inactive RME 8 S.. RME 8 T.. RME 4 I.. RME 4 U.. DME 2 T.. JME 4 T/JME 4 T 24V.. HME 6 T.. RME 4 S/RME 4 C-load.. DME 2/SME 2.. BME 6.. JME 4 S.. HME 4..	Selection of 1st extension module, if available. (MIX or MIX2 series)
<i>Type of 2nd extension module</i>	not available/inactive RME 8 S.. RME 8 T.. RME 4 I.. RME 4 U.. DME 2 T.. JME 4 T/JME 4 T 24V.. HME 6 T.. RME 4 S/RME 4 C-load.. DME 2/SME 2.. BME 6.. JME 4 S.. HME 4..	Selection of 2nd extension module, if available. (MIX or MIX2 series)
<i>Time for cycl. sending of feedback obj. (MIX series, order no. 491...)</i>	2 minutes, 3 minutes, 5 minutes, 10 minutes, 15 minutes , 20 minutes 30 minutes, 45 minutes 60 minutes	This parameter is used exclusively for MIX series extension modules. (DME 2 S, SME 2, JME 4 S, BME 6 RME 4 S/C-load, and HME 4)

Continuation:

Designation	Values	Description
<i>Function of manual button (MIX2 series, order no. 493...)</i>	<p><i>applies for 24 hours or until reset via object blocked</i></p> <p><i>applies until reset via object</i></p> <p><i>applies for 30 minutes or until reset via object</i></p> <p><i>applies for 1 hour or until reset via object</i></p> <p><i>applies for 2 hours or until reset via object</i></p> <p><i>applies for 4 hours or until reset via object</i></p> <p><i>applies for 8 hours or until reset via object</i></p> <p><i>applies for 12 hours or until reset via object</i></p>	<p>Determines how long the device works manually and how this is ended.</p> <p>In manual mode, the channels can only be switched on and off via the buttons on the device.</p> <p>See also: object_78</p> <p>This parameter is used exclusively for MIX2 series devices.</p>
<i>Manual operation of channels (MIX2 series, order no. 493...)</i>	<p><i>unblocked</i></p> <p><i>blocked</i></p>	<p>The channels can be operated via the buttons on the device.</p> <p>No manual operation, the buttons on the device are blocked..</p>

5.3.2.2 The "RMG 4 U basic module" parameter page

Designation	Values	Description
<i>Relay switch delay</i>	<p><i>None</i></p> <p><i>60 ms</i></p> <p><i>100 ms</i></p> <p><i>200 ms</i></p>	<p>This parameter sets the minimum delay between switching on 2 relays if several are activated at the same time. The shortest delay is achieved by using the central switch object (object 242).</p> <p>When switching on via individual telegrams (1 telegram per channel), the bus running times and the sequential processing of commands cause an additional delay.</p> <p>This can help avoid high current peaks when devices are switched on simultaneously (e.g. with a number of lighting strips).</p> <p>There is no added delay.</p> <p>When a relay switches on, the next one can only switch on after the set delay is completed.</p> <p>The switch-on delay between the first and last relay is calculated according to the following formula: (Number of channels – 1) x delay</p> <p>Example: RMG 4 U and 60 ms: = (4 channels – 1) * 60 ms = 180 ms → Channel C4 switches 180 ms after C1.</p>

5.3.2.3 The "RMG 4 U channel Cx: Configuration options" parameter page

Table 8

Designation	Values	Description
<i>Copy main parameters from channel C1</i>	<p><i>Yes</i></p> <p><i>no</i></p>	<p>For channels C2..C4 only. The copy function simplifies the configuration of identical channels by many settings only having to be entered on the 1st channel.</p> <p>The following parameter settings are taken directly from channel C1:</p> <ul style="list-style-type: none"> - Channel function - Adjust block function - Participation in central objects - Adjust feedback <p>No settings are taken from C1.</p>
<i>Channel function</i>	<p>Switching On/Off..</p> <p><i>On/off time delay..</i></p> <p><i>Pulse function..</i></p> <p><i>Staircase light timer switch with forewarning function..</i></p> <p><i>Flashing..</i></p>	Determines the basic functionality of the channel.
<i>Activation of function via</i>	<p>Switch object</p> <p><i>Exceeding the threshold</i></p>	<p>The channel is operated via a 1-bit object.</p> <p>The channel is operated through exceeding a 1 or 2-byte threshold. See below: The „Threshold“ parameter page</p>
<i>Adjust block function</i>	<p><i>Yes..</i></p> <p><i>no</i></p>	<p>The block function can be individually adjusted. The relevant parameter page is shown.</p> <p>The block function works with the standard parameters:</p> <ul style="list-style-type: none"> - <i>Block with ON telegram</i> - <i>When setting the block: Unchanged</i> - <i>When cancelling: Update.</i>
<i>Activate scenes</i>	<p><i>Yes..</i></p> <p><i>no</i></p>	Should scenes be used?

Continuation:

Designation	Values	Description
<i>Participation in central objects</i>	<p>no</p> <p><i>at Central switching, Permanent On, Permanent OFF</i> <i>only in central continuous ON</i> <i>only in central continuous OFF</i> <i>only in central switching</i> <i>only in central switching and continuous ON</i> <i>only in central switching and continuous OFF</i> <i>only in central permanent On and permanent OFF</i></p>	<p>Central objects are not taken into account.</p> <p>Which central objects are to be taken into account?</p> <p>Central objects enable the simultaneous switching on and off of several channels with one single object.</p>
<i>Adjust feedback</i>	<p><i>Yes..</i></p> <p>no</p>	<p>The feedback function can be individually adjusted. The relevant parameter page is shown.</p> <p>The <i>Feedback</i> function works with the standard parameters: - <i>not inverted</i> - <i>do not transmit cyclically</i></p>
<i>Activate hour counter</i>	<p><i>Yes..</i></p> <p>no</p>	<p>Is the <i>hour counter/service interval</i> function to be used?</p>
<i>Activate link</i>	<p><i>Yes..</i></p> <p>no</p>	<p>Are logical links to be used with the channel object?</p>

5.3.2.4 The "Contact characteristics" parameter page

Table 9

Designation	Values	Description
<i>Type of contact</i>	<p><i>NO contact</i></p> <p><i>NC contact</i></p>	<p>Standard: The relay contact is closed when a switch-on command is issued.</p> <p>Inverted: The relay contact is opened when a switch-on command is issued.</p>
<i>Status with download and bus failure</i>	<p><i>OFF</i></p> <p><i>ON</i></p> <p><i>unchanged</i></p>	<p>After download or with loss of bus voltage...</p> <p>..the relay remains switched off.</p> <p>..the relay switches on.</p> <p>...the relay remains in the same state as before.</p>
<i>Status after restoration of the mains supply or bus supply</i>	<p><i>OFF</i></p> <p><i>ON</i></p> <p><i>Same as before failure</i></p>	<p>After return of mains or bus voltage...</p> <p>..the relay remains switched off.</p> <p>..the relay switches on.</p> <p>...the relay remains in the same state as before.</p>

5.3.2.5 The "On/Off delay" parameter page

This parameter page appears if *On/Off delay* is chosen as the *Channel function*.

Table 10

Designation	Values	Description
<i>Switch-on delay</i>		
<i>hours (0..3)</i>	0..3	Input of desired switch-on delay in hours.
<i>minutes (0..60)</i>	0..60	Input of desired switch-on delay in minutes.
<i>seconds (0.225)</i>	0..255	Input of desired switch-on delay in seconds.
<i>Switch-off delay</i>		
<i>hours (0..3)</i>	0..3	Input of desired switch-off delay in hours.
<i>minutes (0..60)</i>	0..60	Input of desired switch-off delay in minutes.
<i>seconds (0.255)</i>	0..255	Input of desired switch-off delay in seconds.

5.3.2.6 The "Pulse function.." parameter page

This parameter page appears if *Pulse function* is chosen as the *Channel function*.

Table 11

Designation	Values	Description
<i>hours (0..3)</i>	0..3	Input of desired pulse duration in hours.
<i>minutes (0..60)</i>	0..60	Input of desired pulse duration in minutes.
<i>seconds (0.255)</i>	0..255	Input of desired pulse duration in seconds.
<i>Pulse can be retriggered (with 1 on switch object)</i>	yes	The pulse can be extended as often as desired via a 1-telegram
	no	The pulse cannot be extended.
<i>Pulse can be reset (with 1 on switch object)</i>	yes	The pulse can be ended early at anytime via a 0-telegram.
	no	The pulse cannot be ended early

5.3.2.7 The "Staircase light with forewarning function .." parameter page


This parameter page appears if *Staircase light with forewarning function* is chosen as the *Channel function*.

The user can, anytime, press a push button again, to extend the staircase light time.

Table 12

Designation	Values	Description
Staircase light time (min. 1 s)		
<i>hours (0..3)</i>	0..3	Input of desired staircase light time in hours.
<i>minutes (0..60)</i>	0..60	Input of desired staircase light time in minutes.
<i>seconds (0.255)</i>	0..255 Default value = 1	Input of desired staircase light time in seconds.
<i>The maximum sum of pulses 1..40</i>	1..40	determines how often the staircase light time can be extended (restarted) by pressing the button again.
<i>Duration of 1st forewarning in s (0..60)</i>	0 1..60 Default value = 10	0 The light switches off immediately once the staircase light time is completed. 1..60 Once the staircase light time is completed, the light should briefly flash and then stay on for the duration of the forewarning
<i>Duration of 2nd forewarning in s (0..60)</i>	0 1..60 Default value = 10	0 No 2nd forewarning. The light switches off at the end of the 1st forewarning. 1..60 Second forewarning: Once the 1st forewarning is completed, the light should flash briefly and then stay on for the duration of the 2nd forewarning. The light switches off when this time is completed.

Example of forewarning function:

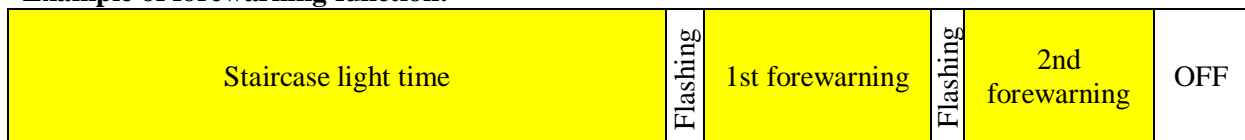

5.3.2.8 The "Flashing.." parameter page

This parameter page appears if *Flashing* is chosen as the *Channel function*.

Table 13

Designation	Values	Description
<i>ON phase of flash pulse</i>		
<i>hours (0..3)</i>	0..3	Input of desired pulse time (t _i) in hours.
<i>minutes (0..60)</i>	0..60	Input of desired pulse time in minutes.
<i>seconds (0.255)</i>	0..255	Input of desired pulse time in seconds.
<i>OFF phase of flash pulse</i>		
<i>hours (0..3)</i>	0..3	Input of desired length of break (t _p) in hours.
<i>minutes (0..60)</i>	0..60	Input of desired length of break in minutes.
<i>seconds (0.255)</i>	0..255	Input of desired length of break in seconds.
<i>How often should it flash</i>	<i>Until it switches off</i>	The channel flashes until a switch-off telegram is received.
	1 x	The channel flashes as often as set here.
	2 x	
	3 x	
	4 x	
	5 x	
	7 x	
	10 x	
	15 x	
	20 x	
	30 x	
	50 x	

5.3.2.9 The "Threshold" parameter page

This page is shown if the *Activation of the function by* parameter is set to *Exceeding threshold*.

Table 14

Designation	Values	Description
<i>Type of threshold object</i>	<p>Object type: Percent (DPT 5.001)</p> <p><i>Object type: Counter value 0..255 (DPT 5.010)</i></p> <p><i>Object type: Counter value 0..65535 (DPT 7.001)</i></p> <p><i>Object type: EIS5 e.g. CO2, brightness etc. (DPT 9.xxx)</i></p>	Value type for threshold.
<i>Response on exceeding the threshold</i>	<p><i>As switch object = 0</i></p> <p><i>As switch object = 1</i></p>	<p>Should the channel switch on or off on exceeding the threshold? The set <i>type of contact</i> must be taken into account here.</p> <p><i>NO contact:</i> The relay switches off if threshold is exceeded. <i>NC contact:</i> The relay switches on if threshold is exceeded.</p> <p><i>NO contact:</i> The relay switches on if threshold is exceeded. <i>NC contact:</i> the relay switches off if threshold is exceeded.</p>
Parameter for <i>Percent</i> threshold object		
<i>Threshold</i>	<p>1..99 %</p> <p><i>Default value = 50%</i></p>	<p>Desired threshold.</p> <p>Example of <i>NO contact</i> with response <i>as switch object = 1</i>: Switches on when: Object value > threshold Switches off when: Object value < threshold - hysteresis</p>
<i>Hysteresis (as %)</i>	<p>1..99 %</p> <p><i>Default value = 10%</i></p>	The hysteresis prevents frequent change overs after small fluctuations in readings.

Continuation:

Designation	Values	Description
Parameter for threshold object <i>Counter value 0..255</i>		
<i>Lower threshold</i>	<i>1..254</i> <i>Default value = 127</i>	Desired threshold. Example of <i>NO contact</i> with response as <i>switch object = 1</i> : Switches on when: Object value > threshold Switches off when: Object value < threshold - hysteresis
<i>Hysteresis</i>	<i>1..254</i> <i>Default value = 5</i>	The hysteresis prevents frequent change overs after small fluctuations in readings.
Parameter for threshold object <i>Counter value 0..65535</i>		
<i>Lower threshold</i>	<i>1..65534</i> <i>Default value = 1000</i>	Desired threshold. Example of <i>NO contact</i> with response as <i>switch object = 1</i> : Switches on when: Object value > threshold Switches off when: Object value < threshold - hysteresis
<i>Hysteresis</i>	<i>1..65534</i> <i>Default value = 5</i>	The hysteresis prevents frequent change overs after small fluctuations in readings.
Parameter for threshold object <i>EIS5 (e.g. CO₂, brightness...)</i>		
<i>Lower threshold</i> <i>Format (-)0.00..99999</i>	<i>0.00..99999</i> <i>Default value = 20</i>	Desired threshold. Example of <i>NO contact</i> with response as <i>switch object = 1</i> : Switches on when: Object value > threshold Switches off when: Object value < threshold - hysteresis
<i>Hysteresis</i> <i>0.00..9999</i>	<i>0.00..9999</i> <i>Default value = 1</i>	The hysteresis prevents frequent change overs after small fluctuations in readings.

5.3.2.10 The "*Block function*" parameter page

This page appears when *Adjust block function* is selected on the *Configuration options* parameter page.

Table 15

Designation	Values	Description
<i>Block telegram</i>	<i>Block with ON telegram</i>	0 = Enable 1 = Block
	<i>Block with OFF telegram</i>	0 = Block 1 = Enable Note: The block is always deactivated after reset.
<i>Response when setting the block</i>	<i>OFF</i>	Switch off
	<i>ON</i>	Switch on
	<i>unchanged</i>	No response
<i>Response when cancelling the block</i>	<i>OFF</i>	Switch off
	<i>ON</i>	Switch on
	<i>Unchanged</i>	No response
	<i>update</i>	Restore normal operation and switch relay accordingly.

5.3.2.11 The "Scenes" parameter page

This page appears when the *Scenes* are activated on the *Configuration options* parameter page. Each channel can participate in up to 8 scenes.

Table 16

Designation	Values	Description
<i>Block telegram for scenes</i>	<p>Block with ON telegram</p> <p>Block with OFF telegram</p>	<p>0 = Enable 1 = Block</p> <p>0 = Block 1 = Enable</p> <p>Note: With this setting the scenes are always blocked immediately after reset or download.</p>
<i>All channel scene statuses</i>	<p>Overwrite on download</p> <p>Unchanged after download</p>	<p>A download deletes all scene memories in a channel, i.e. all previously taught in scenes.</p> <p>When a scene number is called, the channel assumes the configured <i>Status after download</i> (see below).</p> <p>See appendix: Teach in scenes without telegrams</p> <p>All previously taught in scenes are saved.</p> <p>However, the scene numbers the channel should react to can be changed (see below: <i>Channel reacts to</i>).</p>
<i>Participation in central scene object</i>	No yes	Should the device react to the central scene object?
<i>Channel reacts to</i>	<p>No scene number</p> <p>Scene number 1</p> <p>Scene number 63</p>	First of the 8 possible scene numbers the channel is to react to.
<i>Status after download</i>	Off On	<p>New switching status that the selected scene number is to be allocated to.</p> <p>Only possible if the scene statuses are to be overwritten after download.</p>
<i>Permit teach in</i>	No Yes	<p>Scenes can only be called up.</p> <p>The user can both call up and teach in or amend scenes.</p>

Continuation:

Designation	Values	Description
<i>Channel reacts to</i>	<i>No scene number</i> <i>Scene number 1</i> <i>Scene number 2</i> ... <i>Scene number 63</i>	Second of the 8 possible scene numbers
<i>Status after download</i>	<i>Off</i> <i>On</i>	See above.
<i>Permit teach in</i>	<i>No</i> <i>Yes</i>	See above.
<i>Channel reacts to</i>	<i>No scene number</i> <i>Scene number 1</i> ... <i>Scene number 3</i> ... <i>Scene number 63</i>	Third of the 8 possible scene numbers
<i>Status after download</i>	<i>Off</i> <i>On</i>	See above.
<i>Permit teach in</i>	<i>No</i> <i>Yes</i>	See above.
<i>Channel reacts to</i>	<i>No scene number</i> <i>Scene number 1</i> ... <i>Scene number 4</i> ... <i>Scene number 63</i>	Fourth of the 8 possible scene numbers
<i>Status after download</i>	<i>Off</i> <i>On</i>	See above.
<i>Permit teach in</i>	<i>No</i> <i>Yes</i>	See above.
<i>Channel reacts to</i>	<i>No scene number</i> <i>Scene number 1</i> ... <i>Scene number 5</i> ... <i>Scene number 63</i>	Fifth of the 8 possible scene numbers
<i>Status after download</i>	<i>Off</i> <i>On</i>	See above.
<i>Permit teach in</i>	<i>No</i> <i>Yes</i>	See above.
<i>Channel reacts to</i>	<i>No scene number</i> <i>Scene number 1</i> ... <i>Scene number 6</i> ... <i>Scene number 63</i>	Sixth of the 8 possible scene numbers

Continuation:

Designation	Values	Description
<i>Status after download</i>	<i>Off</i> <i>On</i>	See above.
<i>Permit teach in</i>	<i>No</i> <i>Yes</i>	See above.
<i>Channel reacts to</i>	<i>No scene number</i> <i>Scene number 1</i> ... <i>Scene number 7</i> ... <i>Scene number 63</i>	Seventh of the 8 possible scene numbers
<i>Status after download</i>	<i>Off</i> <i>On</i>	See above.
<i>Permit teach in</i>	<i>No</i> <i>Yes</i>	See above.
<i>Channel reacts to</i>	<i>No scene number</i> <i>Scene number 1</i> ... <i>Scene number 8</i> ... <i>Scene number 63</i>	Last of the 8 possible scene numbers
<i>Status after download</i>	<i>Off</i> <i>On</i>	See above.
<i>Permit teach in</i>	<i>No</i> <i>Yes</i>	See above.

5.3.2.12 The "*Feedback*" parameter page

This page appears when *Adjust feedback* is selected on the *Configuration options* parameter page.

Table 17

Designation	Values	Description
<i>Reported status</i>	<i>Not inverted</i> <i>inverted</i>	Channel switched on: feedback object sends a 1 Channel switched on: feedback object sends a 0
<i>Transmit feedback cyclically</i>	<i>No</i> <i>yes</i>	Send at regular intervals?
<i>Time for cyclical transmission of feedback</i>	<i>2 minutes, 3 minutes, 5 minutes, 10 minutes, 15 minutes, 20 minutes, 30 minutes, 45 minutes 60 minutes</i>	At what interval?

5.3.2.13 The "Hour counter and service" parameter page

This page appears when *Activate hour counter* is selected on the *Configuration options* parameter page.

Table 18

Designation	Values	Description
<i>Type of hour counter</i>	<i>Hour counter</i>	Forward counter for duty cycle of the channel.
	<i>Counter for time period before next service</i>	Backward counter for duty cycle of the channel.
Hour counter		
<i>Reporting of operating hours when changing (0..100 h, 0 = no report)</i>	0..100 Default value = 10	At what interval is the current meter reading to be sent? Example: 10 = Send each time the meter reading increases by another 10 hours.
<i>Report operating hours cyclically</i>	No yes	Send at regular intervals?
<i>Time for cyclical transmission</i>	2 minutes, 3 minutes, 5 minutes, 10 minutes, 15 minutes, 20 minutes, 30 minutes, 45 minutes 60 minutes	At what interval?
Counter for time period before next service		
<i>Service interval (0..2000, x10 h)</i>	0..2000 Default value = 100	Desired timescale between 2 services. Example: 10 = 10 x 10 h = 100 hours
<i>Reporting of time to service when changing (0..100 h, 0 = no report)</i>	0..100 Default value = 10	At what interval is the current meter reading to be sent? Example: 10 = Send each time the meter reading decreases by another 10 hours.
<i>Report time to service cyclically</i>	no Yes	Send remaining time to next service at regular intervals? → Object <i>Time to next service</i> .
<i>Report service cyclically</i>	no Yes	Send expiry of time to next service at regular intervals? → Object <i>Service required</i> .

Continuation:

Designation	Values	Description
<i>Time for cyclical transmission (time to service and service</i>	<i>2 minutes, 3 minutes, 5 minutes, 10 minutes, 15 minutes, 20 minutes, 30 minutes, 45 minutes 60 minutes</i>	At what interval?

5.3.2.14 The "*Link*" parameter page

This page appears when *Activate link* is selected on the *Configuration options* parameter page.

An additional object appears, which forms a logical link in combination with the channel's switching/threshold object.

The channel only switches if the link requirement has been met.

Table 19

Designation	Values	Description
<i>Activate link</i>	<i>AND link</i>	The <i>Logic input in AND gate</i> object appears (e.g. object 1).
	<i>OR link (override)</i>	The <i>Logic input in OR gate</i> object appears (e.g. object 1).
	<i>XOR link</i>	The <i>Logic input in XOR gate</i> object appears (e.g. object 1).
<i>Disable object affects logic object</i>	<i>No</i>	The disable object only affects the channel object (e.g. object 0). If required, the logic object can activate the channel function despite block (with OR and XOR link).
	<i>yes</i>	The disable object affects the channel object and the logic object. The channel function is completely blocked if the block is active.

6 Typical applications

These typical applications are designed to aid planning and are not to be considered an exhaustive list. It can be extended and updated as required.

6.1 2x switching with push button interface

2 push buttons are connected to a TA 2 push button interface and they control 2 channels of the RMG 4 U.

6.1.1 Devices:

- RMG 4 U (4930223)
- TA 2 (4969202)

6.1.2 Overview

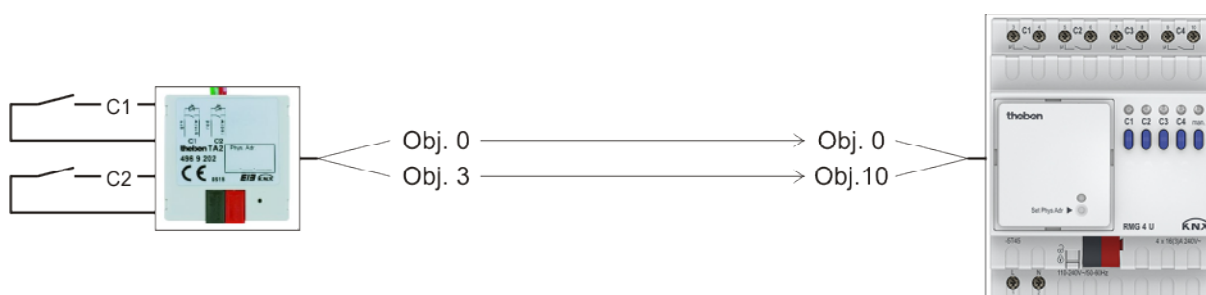


Figure 1

6.1.3 Objects and links

Table 20

No.	TA 2	No.	RMG 4 U	Comment
	Object name		Object name	
0	<i>Channel 1 switching</i>	0	<i>RMG 4 U channel C1 Switch object</i>	-
3	<i>Channel 2 switching</i>	10	<i>RMG 4 U channel C2 switch object</i>	-

6.1.4 Important parameter settings

Standard or customer-defined parameter settings apply for unlisted parameters.

Table 21: TA 2

Parameter page	Parameter	Setting
<i>Channel 1</i>	<i>Channel function</i>	<i>Switch/push button</i>
	<i>Object type</i>	<i>Switching (1-bit)</i>
	<i>Response to rising edge</i>	<i>BY</i>
	<i>Response to falling edge</i>	<i>none</i>
<i>Channel 2</i>	<i>See channel 1</i>	

Table 22: RMG 4 U

Parameter page	Parameter	Setting
<i>RMG 4 U channel C1: Configuration options</i>	<i>Channel function</i>	<i>Switching ON/OFF</i>
	<i>Activation of function via</i>	<i>Switch object</i>
<i>Contact characteristics</i>	<i>Type of contact</i>	<i>NO contact</i>
<i>RMG 4 U channel C2</i>	<i>See channel C1</i>	

6.2 Switching light with service counter and display

A fluorescent light strip in a hall is controlled by channel C1.
The lamps have to be replaced after 20,000 hours (= service).
The time period to the service and the service status are shown on the VARIA 826 S display.

6.2.1 Devices

- RMG 4 U (4930223)
- VARIA 826 S (8269210/8269211)

6.2.2 Overview

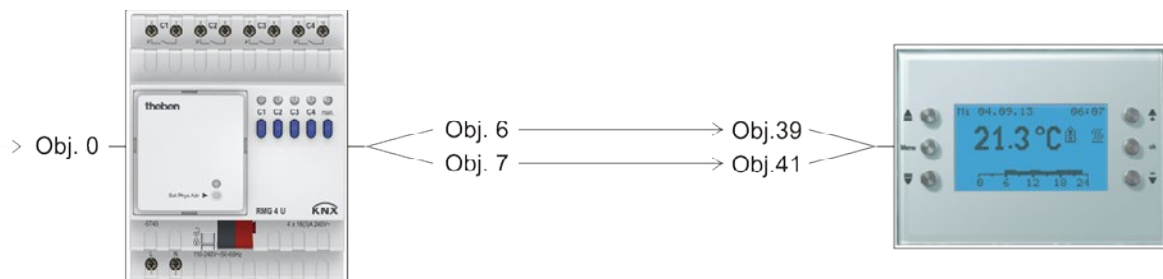


Figure 2

6.2.3 Objects and links

Table 23

No.	KNX sensor Object name	No.	RMG 4 U Object name	Comment
-	<i>(Switching object)</i>	0	<i>Switch object</i>	Any KNX sensor: Push button, time switch, twilight switch, etc. sends the switch command to RMG 4 U

Table 24:

No.	RMG 4 U Object name	No.	VARIA Object name	Comment
6	<i>Time to next service</i>	39	<i>Counter value 0 ..65535</i>	Time in hours
7	<i>Service required</i>	41	<i>Switching ON/OFF</i>	1 = Time has elapsed

6.2.4 Important parameter settings

Standard or customer-defined parameter settings apply for unlisted parameters.

Table 25: RMG 4 U

Parameter page	Parameter	Setting
<i>General</i>	<i>Type of basic module</i>	<i>RMG 4 U</i>
<i>RMG 4 U channel C1: Configuration options</i>	<i>Channel function</i>	<i>Switching ON/OFF</i>
	<i>Activate hour counter</i>	<i>Yes..</i>
<i>Contact characteristics</i>	<i>Type of contact</i>	<i>NO contact</i>
<i>Hour counter and service</i>	<i>Type of hour counter</i>	<i>Counter for time period before next service</i>
	<i>Service interval (0..2000, x10 h)</i>	<i>200</i>
	<i>Reporting of time to service when changing (0..100 h, 0 = no report)</i>	<i>100</i>
	<i>Report service cyclically</i>	<i>yes</i>

Table 26: VARIA

Parameter page	Parameter	Setting
<i>Selection of display pages</i>	<i>Show page 1 for display objects</i>	<i>yes</i>
<i>Display objects page 1</i>	<i>Fade in operating instructions on page 1</i>	<i>No</i>
	<i>Page heading</i>	<i>Lamp maintenance*</i>
<i>Page 1, line 1</i>	<i>Line format</i>	<i>16 bit counter value object type</i>
	<i>Text for line 1</i>	<i>Service in*</i>
	<i>Unit for display object</i>	<i>h</i>
	<i>Value range</i>	<i>Negative and positive numbers</i>
	<i>Display before receipt of value</i>	<i>Read from object via bus</i>
<i>Page 1, line 2</i>	<i>Line format</i>	<i>Switch on object type</i>
	<i>Text for line 1</i>	<i>Lamp status*</i>
	<i>Text for object value = 0</i>	<i>OK*</i>
	<i>Text for object value = 1</i>	<i>Service*</i>
	<i>Display before receipt of value</i>	<i>Read from object via bus</i>

*Suggested text

6.3 Simple warning function with flashing light

A monitoring device, e.g. flood alarm is connected to a TA 2 push button interface, and it controls a channel of the RMG 4 U.

A lamp shall flash in the event of an error (channel 1 relay output).

6.3.1 Devices:

- RMG 4 U (4930223)
- TA 2 (4969202)

6.3.2 Overview

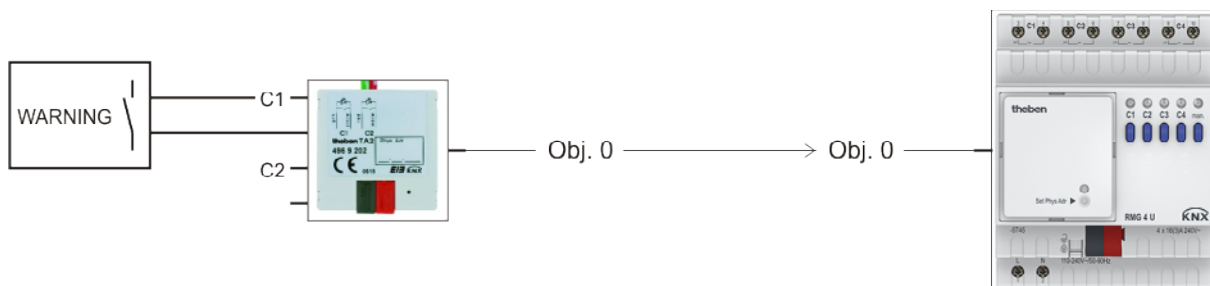


Figure 3

6.3.3 Objects and links

Table 27

No.	TA 2	No.	RMG 4 U	Comment
	Object name		Object name	
0	Channel 1 switching	0	RMG 4 U channel C1 Switch object	-

6.3.4 Important parameter settings

Standard or customer-defined parameter settings apply for unlisted parameters.

Table 28: TA 2

Parameter page	Parameter	Setting
<i>Channel 1</i>	<i>Channel function</i>	<i>Switch/push button</i>
	<i>Object type</i>	<i>Switching (1-bit)</i>
	<i>Response to rising edge</i>	<i>On</i>
	<i>Response to falling edge</i>	<i>Off</i>

Table 29: RMG 4 U

Parameter page	Parameter	Setting
<i>General</i>	<i>Type of basic module</i>	<i>RMG 4 U</i>
<i>RMG 4 U channel C1: Configuration options</i>	<i>Channel function</i>	<i>Flashing</i>
	<i>Activation of function via</i>	<i>Switch object</i>
<i>Contact characteristics</i>	<i>Type of contact</i>	<i>NO contact</i>
<i>Flashing</i>	<i>ON phase:</i>	
	<i>Hours</i>	<i>0</i>
	<i>Minutes</i>	<i>0</i>
	<i>Seconds</i>	<i>1</i>
	<i>OFF phase:</i>	
	<i>Hours</i>	<i>0</i>
	<i>Minutes</i>	<i>0</i>
	<i>Seconds</i>	<i>1</i>
	<i>How often should it flash</i>	<i>Until it switches off</i>

7 Appendix

7.1 The scenes

7.1.1 Principle

The current status of a channel, or a complete MIX system can be stored and retrieved as required at a later point via the scene function.

That applies to switching, blinds and dimming channels. Each channel can participate simultaneously in up to 8 scenes.

This requires permission to access scenes for the relevant channel via parameter. See Activate scenes parameter and Scenes parameter page.

The current status is allocated to the appropriate scene number when a scene is saved. The previously saved status is restored when a scene number is called up.

This allows a MIX system to be easily associated with each chosen user scene.

Table 30: Permitted scene numbers

Series	Appliance	Supported scene numbers
MIX (order no. 4910xxx)	SME 2 S, JME 4 S, RME 4 S / C-load	1 .. 8
MIX2 (order no. 4930xxx)	RMG 4 I / RME 4 I, RMG 4 U / RME 4 U, RMG 8 S / RME 8 S, RMG 8 T / RME 8 T, DMG 2 T / DME 2 T, JMG 4 T / JME 4 T,	1 .. 64

The scenes are permanently stored and remain intact even after the application has been downloaded again.

See All channel scene statuses parameter on the Scenes parameter page.

7.1.2 Call up or save scenes:

To call up or save a scene, the relevant code is sent to the scene object (obj. 243).

Table 31

Scene	Call up		Save	
	Hex.	Dec.	Hex.	Dec.
1	\$00	0	\$80	128
2	\$01	1	\$81	129
3	\$02	2	\$82	130
4	\$03	3	\$83	131
5	\$04	4	\$84	132
6	\$05	5	\$85	133
7	\$06	6	\$86	134
8	\$07	7	\$87	135
9	\$08	8	\$88	136
10	\$09	9	\$89	137
11	\$0A	10	\$8A	138
12	\$0B	11	\$8B	139
13	\$0C	12	\$8C	140
14	\$0D	13	\$8D	141
15	\$0E	14	\$8E	142
16	\$0F	15	\$8F	143
17	\$10	16	\$90	144
18	\$11	17	\$91	145
19	\$12	18	\$92	146
20	\$13	19	\$93	147
21	\$14	20	\$94	148
22	\$15	21	\$95	149
23	\$16	22	\$96	150
24	\$17	23	\$97	151
25	\$18	24	\$98	152
26	\$19	25	\$99	153
27	\$1A	26	\$9A	154
28	\$1B	27	\$9B	155
29	\$1C	28	\$9C	156
30	\$1D	29	\$9D	157
31	\$1E	30	\$9E	158
32	\$1F	31	\$9F	159

Continuation:

Scene	Call up		Save	
	Hex	Dec.	Hex	Dec.
33	\$20	32	\$A0	160
34	\$21	33	\$A1	161
35	\$22	34	\$A2	162
36	\$23	35	\$A3	163
37	\$24	36	\$A4	164
38	\$25	37	\$A5	165
39	\$26	38	\$A6	166
40	\$27	39	\$A7	167
41	\$28	40	\$A8	168
42	\$29	41	\$A9	169
43	\$2A	42	\$AA	170
44	\$2B	43	\$AB	171
45	\$2C	44	\$AC	172
46	\$2D	45	\$AD	173
47	\$2E	46	\$AE	174
48	\$2F	47	\$AF	175
49	\$30	48	\$B0	176
50	\$31	49	\$B1	177
51	\$32	50	\$B2	178
52	\$33	51	\$B3	179
53	\$34	52	\$B4	180
54	\$35	53	\$B5	181
55	\$36	54	\$B6	182
56	\$37	55	\$B7	183
57	\$38	56	\$B8	184
58	\$39	57	\$B9	185
59	\$3A	58	\$BA	186
60	\$3B	59	\$BB	187
61	\$3C	60	\$BC	188
62	\$3D	61	\$BD	189
63	\$3E	62	\$BE	190
64	\$3F	63	\$BF	191

Examples (central or channel-related):

Calling status of scene 5:

→ Send \$04 to the relevant scene object.

Save current status with scene 5:

→ Send \$84 to the relevant scene object.

7.1.3 Teach in scenes without telegrams (MIX2 and FIX devices ONLY)

Instead of defining scenes individually by telegram, this can be done in advance in the ETS. This merely requires the setting of the *All channel scene statuses* (*Scenes* parameter page) to *Overwrite at download*.

Accordingly, the required status can be selected for each of the 8 possible scene numbers in a channel (= *Status after download* parameter).

The scenes are programmed into the device after the download has been completed.

Later changes via teach in telegrams are possible if required and they can be permitted or blocked via a parameter.

7.2 Conversion of percentages to hexadecimal and decimal values

Percentage value	0%	10%	20%	30%	40%	50%	60%	70%	80%	90%	100%
Hexadecimal	00	1a	33	4D	66	80	99	B3	CC	E6	FF
Decimal	00	26	51	77	102	128	153	179	204	230	255

All values from 00 to FF hex. (0 to 255 dec.) are valid.