

theben

EN Digital twilight
switch

LUNA 120 top2
1200100/ 1200200



307041 01

1. Basic safety information 4

2. Proper use 4

Disposal 4

3. Installation and connection 5

Mounting the time switch 5

Connecting the cable 7

Disconnecting the cable 7

Connection/installation of light sensor 8

4. Device description 10

Display & buttons	10
-------------------	----

Operating instructions	11
------------------------	----

Overview of navigation menu	12
-----------------------------	----

Initial operation	13
-------------------	----

5. Settings and functions 14

Set lux values	14
----------------	----

Set delay	15
-----------	----

Program switching time	16
------------------------	----

Delete switching program	17
--------------------------	----

Activating PIN code	18
---------------------	----

Setting manual or permanent switching	19
---------------------------------------	----

Hour counter	20
--------------	----

Using the OBELISK top2 memory card	20
------------------------------------	----

Resetting the twilight switch	21
-------------------------------	----



6. Technical data	22
-------------------	----

7. Contact	23
------------	----



1. Basic safety information



WARNING

Danger of death through electric shock or fire!

- Installation should only be carried out by a qualified electrician!

- The device is designed for installation on DIN top hat rails (in accordance with EN 60715)



OBELISK top2 memory card: Avoid mechanical overload and contamination during storage/transportation



2. Proper use

- The digital twilight switch is used for lighting equipment (streets), external stairways, display windows, entrances etc.
- Only for use in closed, dry rooms
- Sensor is installed in the open-air



Do not use on safety devices, e.g. escape route doors, fire safety equipment etc.

Disposal

- Dispose of device in environmentally sound manner

3. Installation and connection


Mounting the time switch




WARNING

Danger of death through electric shock or fire!

- Installation should only be carried out by a qualified electrician!

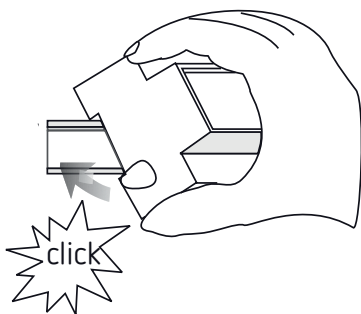


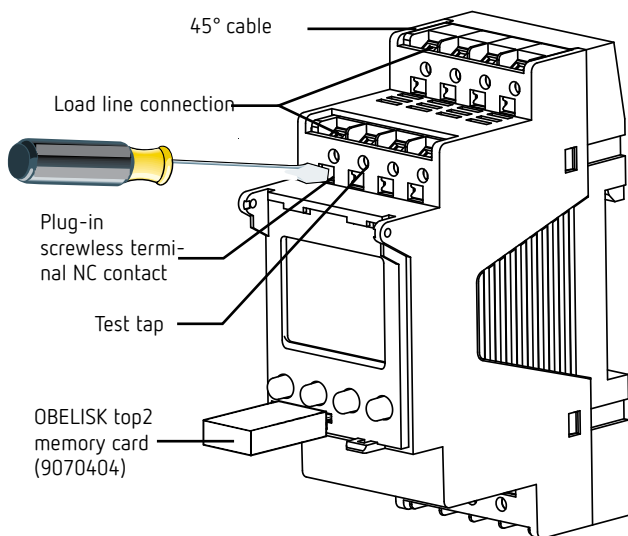

- Mount on DIN top hat rails (as defined in EN 60715)
- Switched voltage-free
- Ensure device cannot be switched on
- Check absence of voltage
- Earth and bypass
- Cover or shield any adjacent live components

Connecting the cable

Wiring diagrams LUNA 120 top2

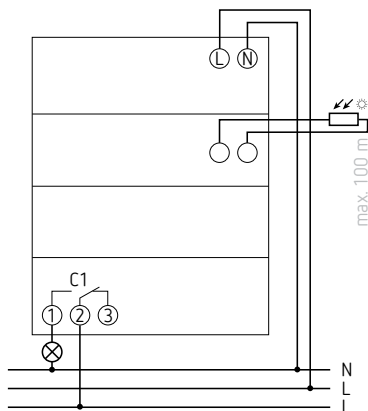

- Strip cable to 8 mm (max. 9)
- Insert cable in the open DuoFix® plug-in terminal at 45°
 - ① 2 cables per terminal position possible
- To open the DuoFix® plug-in terminal, press screwdriver downwards

Disconnecting the cable


- Use the screwdriver to push the load line connection opener downwards

Connection/installation of light sensor

- ⚠ Take length of connection cable into account: max. 100 m ($2 \times 1.5 \text{ mm}^2$), max. 50 m ($2 \times 0.75 \text{ mm}^2$)
- ⚠ Avoid running sensor wiring parallel to mains power cables
- Ensure correct polarity. Disconnect power source


Mounting light sensor 907 0 416

- Mounting light sensor: $0.5\text{--}2.5 \text{ mm}^2$, strip cable by 10 mm (max. 11 mm)

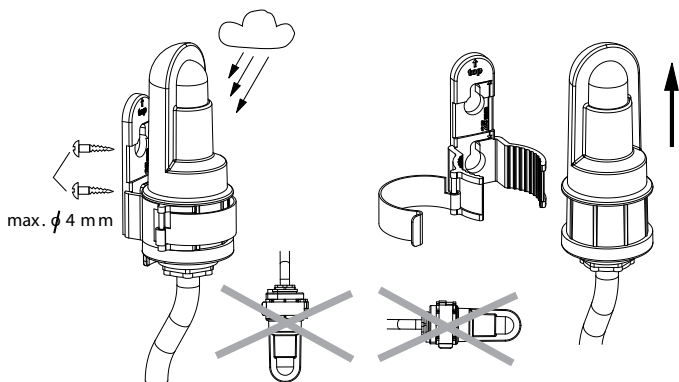



Installing light sensor 907 0 011

- Installing light sensor: 0.25-1.5 mm², strip cable by 8 mm (max. 9 mm)

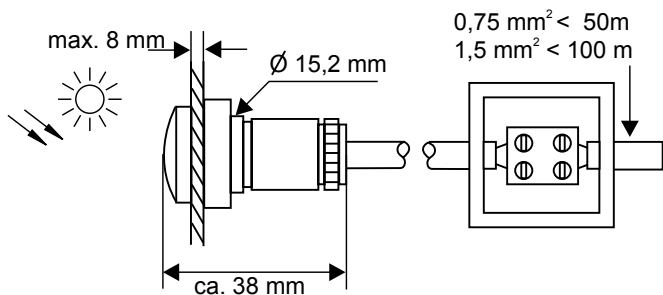


4. Device description


Display & buttons

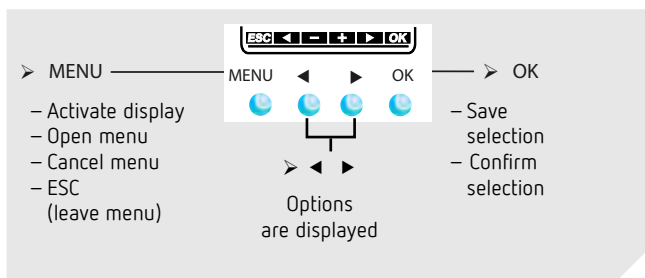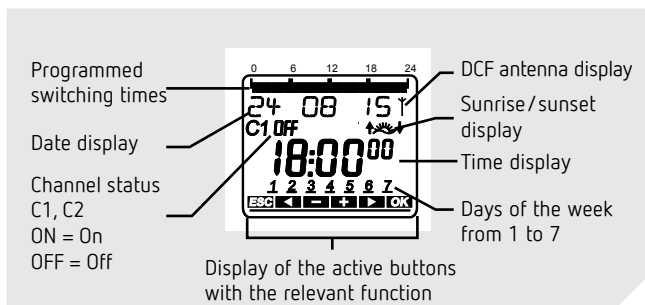


Operating instructions

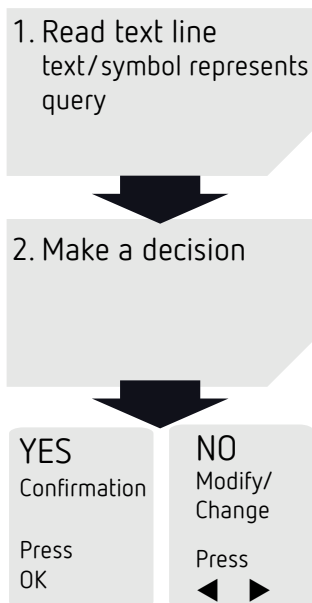

Overview of navigation menu

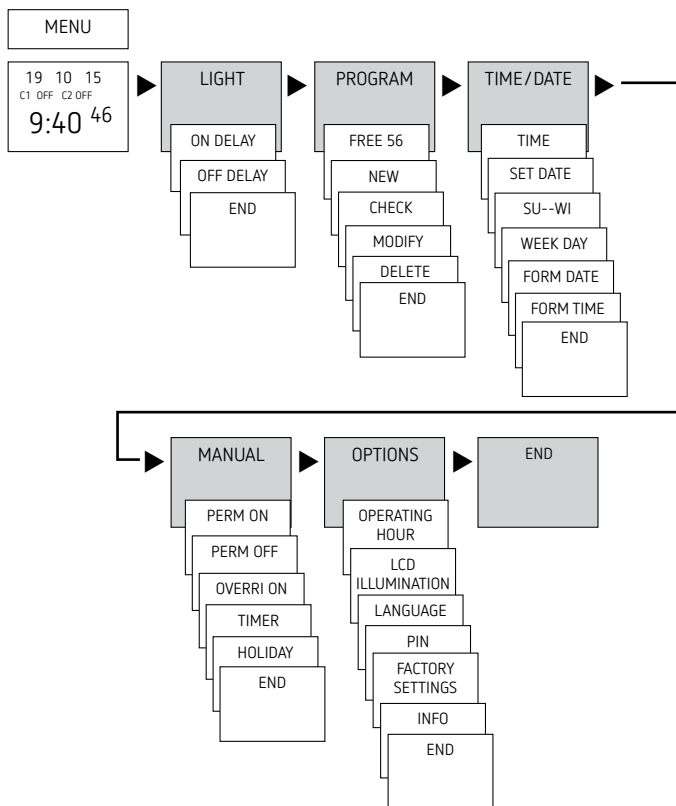


Initial operation

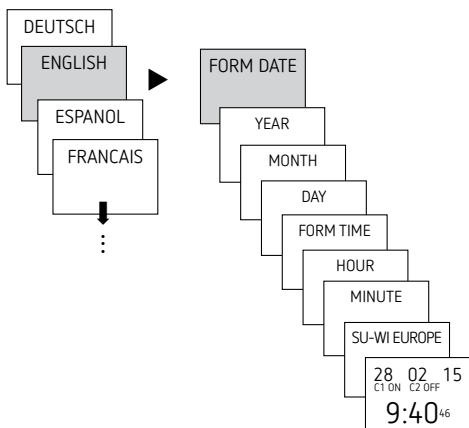

- Set language, date, time as well as summer /winter time (SU-WI)
- Press any button and display follows on screen (see figure)
- ① If a sensor is connected, the measured lux value appears on screen (only during mains operation).

5. Settings and functions

Set lux values

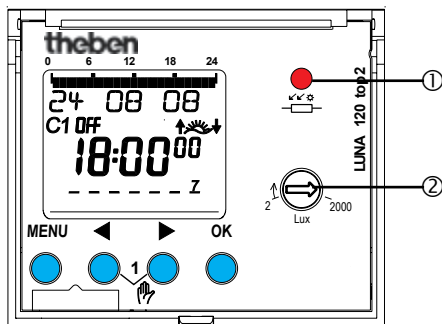


- Set desired range from 2–2000 lx with a screw tab a screwdriver on the potentiometer ② setting
- ① The red LED ① lights up as soon as the set lux value falls below the ambient brightness level

Typical brightness values

Daylight (bright)	80.000 lx
Office accommodation	500 lx
Hallways and stairs	100–150 lx
Street lighting	15 lx
Full moon	ca. 0,3 lx

Set delay

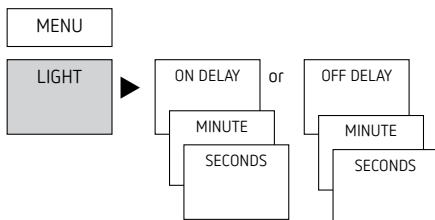


① An on/off delay of 1 minute is preset to avoid faulty operation caused by lightning, car headlights etc. When the delay ends the channel status will flash ON/OFF.

- Press MENU
- Select LIGHT and press OK to confirm
- Select ON DELAY, confirm with OK
- MODIFY HOUR, use the + or – buttons to change hour and minute and confirm with OK.



Program switching time

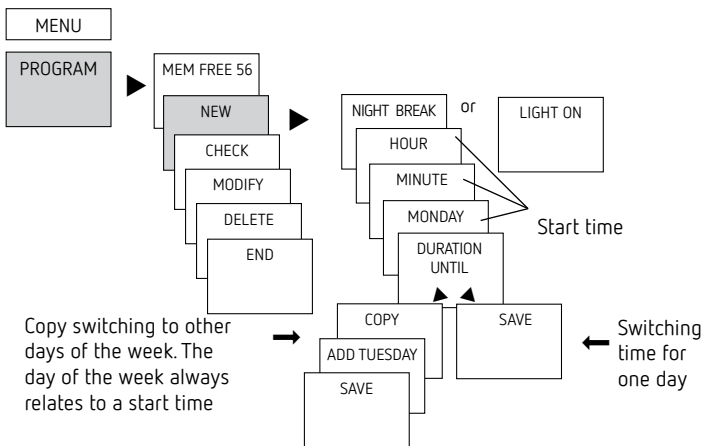

① A switching time always consists of a start time and an end time


① There are 56 memory cells available

Example: Switch on sports hall lighting from Mon–Fri, 7:30 to 12:00 hrs

- Press MENU
- Select PROGRAM and press OK to confirm
- Select NEW, confirm with OK
- Select NIGHT BREAK or LIGHT ON, confirm with OK
- Set required turn-on time (Mo–Fr, 7:30), confirm with OK
- Set DURATION UNTIL, confirm with OK
- Select COPY, confirm with OK
- ADD TUESDAY is displayed, confirm by pressing OK and also confirm the days We, Th, Fr by pressing OK.
- Continue with ► until SAVE is displayed.
- Confirm by pressing OK.

Repeat all steps for the turn-off time, however instead of selecting ON with ► select OFF and enter 12:00 for hour and minute.

Delete switching program

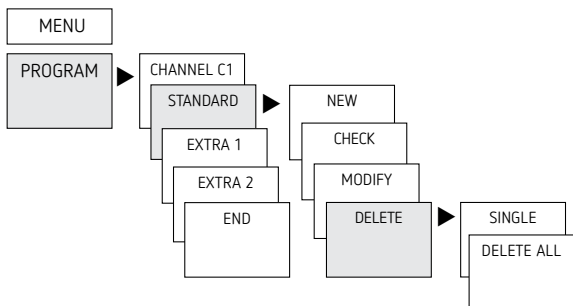


- Press MENU
- Select PROGRAM and confirm with OK
- Select DELETE, confirm with OK
- Select SINGLE or DELETE ALL, confirm with OK

Activating PIN code

The PIN code is set in OPTIONS via the menu.

① If you have forgotten your PIN, call the Theben Hotline.


① Have the serial number ready

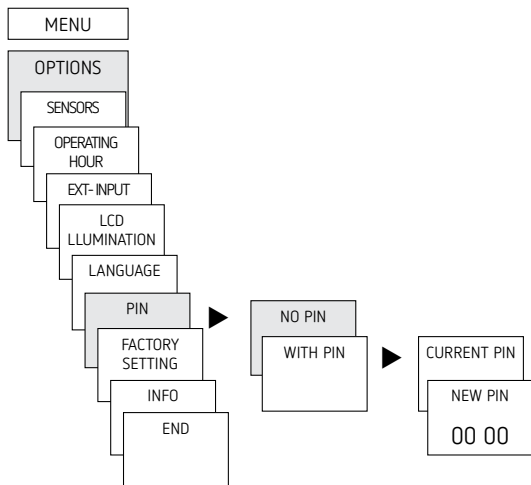

Setting manual or permanent switching

Manual or permanent switching can be set via the menu in MANUAL or (in the automatic screen) by button combination (see picture).

- Manual control:
Reversing the channel status to the next automatic or programmed switching.
- Permanent switching:
As long as a permanent switching (on or off) is activated, the programmed switching times and switching thresholds are ineffective

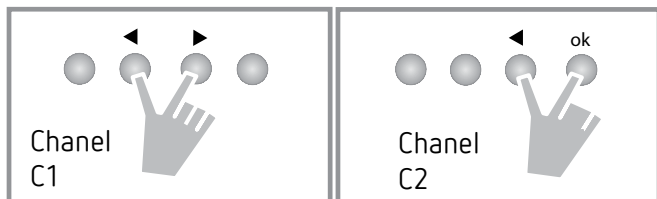

Activating manual control

- Briefly press both buttons simultaneously

Activating permanent switching

- Press both buttons simultaneously for 2 seconds

Cancelling manual/permanent switching

- Press both buttons simultaneously

Hour counter

The operating hours of the channel (relay) are displayed and deleted in the OPTIONS menu. If the number of operating hours exceeds the value set in the Service menu, SERVICE will appear in the display.

Example: Replace a lamp after after 5,000 h.

- Delete operating hours or set a higher value in Service (e.g. to 10,000 h)

Using the OBELISK top2 memory card


All functions can also be set on the PC using the OBELISK software and transferred to the device via the memory card.

- Insert memory card in the time switch
- Read in/out saved switching times and device setups in the time switch or start Obelisk program
- Remove memory card after copying etc.



Avoid mechanical overload and contamination during storage/transport

- ① PC software OBELISK top2 available at www.theben.de

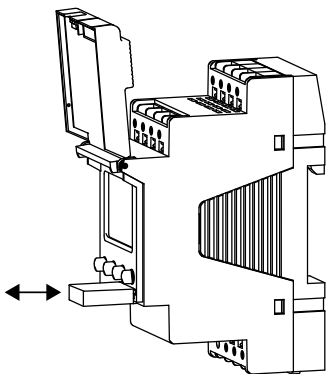

Copying OBELISK → LUNA

This copies the switching program and optionally all time switch settings (e.g. external input, time format etc.) from the memory card in the time switch.


Copying LUNA → OBELISK

This copies all switch programmes and settings from the time switch to the memory card.

Starting OBELISK program

Takes on the switching times and the threshold values that are programmed on the memory card.

As soon as the memory card is removed, the switching times of the time switch are re-activated.

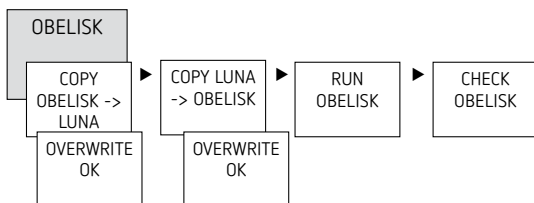

Resetting the twilight switch

- Press the 4 buttons simultaneously
 - You can choose between KEEP PROGRAM and DELETE PROGRAM

6. Technical data

Operating voltage:	220–240 V~, +10 %/-15 %
Frequency:	50–60 Hz
Brightness range:	2–2.000 lx
On/off switch delay:	0–59 min
Power consumption:	1,7 W
Switch output:	phase-independent (zero-crossover switching)
Contact:	μ-contact, two way switch
Switching capacity:	16 A/250 V~ $\cos \varphi = 1$
Fluorescent lamp switching capacity:	10 AX
Switching capacity min.:	10 mA/250 V AC 100 mA/12 V AC/DC
Glow lamp load:	2600 W
Halogen lamp load:	2600 W
Fluorescent lamps KVG:	
uncorrected:	2300 VA
series-corrected:	2300 VA
parallel-corrected:	800 VA (80μF)
Lead-lag circuit (duo):	2300 VA
Fluorescent lamps (EVG – Electronic series devices):	650 W
Compact fluorescent tubes (EVG):	170 W
LED lamps (< 2 W):	30 W
LED lamps (2 W – 8 W):	100 W
LED-lamps (> 8 W):	120 W



Permissible ambient temperature:	– 30 °C ... +55 °C, – 40 °C ... +70 °C (sensor)
Protection class:	II (light sensors III) if correctly mounted
Protection rating: device Mounted light sensor Installation light sensor	IP 20 IP 55 IP 66 (frontside, when installed) IP 40 (backside)



7. Contact

Theben AG
Hohenbergstr. 32
72401 Haigerloch
GERMANY
Tel. +49 7474 692-0
Fax +49 7474 692-150

Hotline

Tel. +49 7474 692-369
hotline@theben.de

Addresses, telephone numbers etc.
www.theben.de